



 
LOW BATTERY INDICATOR

When the battery level is low, the **LOW BATTERY** symbol  will be shown on the top of the screen.



BATTERY INFORMATION

This pager is designed to operate on one 'AAA'-size alkaline battery. The correct time and any stored messages will remain intact for up to five minutes after the battery is removed.

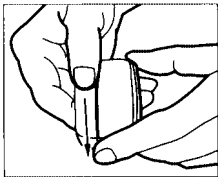

To install or replace the battery:

- Place the pager face down in the palm of your hand.
- Push with a click to unlock the battery door and slide it out as shown.
- Slide a new battery into the battery compartment.
- Ensure the pager is OFF and the battery polarity is correct.
- To close the battery cover, the dot on the cover must be aligned to the dot on the battery casing.

The Page is a **dynamic communication tool** used by over **150 million people** around the world. It is the **smallest, lightest** communication tool available. With its **fixed monthly subscription and low battery usage**, the pager is the most economical communication tool available. Over the years, paging utility has increased from **receiving numbers to text messages** and more.

- To ensure a full understanding of how the Aurora/Duo works, please read this User's Guide carefully.
- A handy pullout Pocket Reference Guide is also available.



EVENTS

GETTING STARTED

Pager Features.....	4
Function.....	5

FUNCTION DETAILS

On/Off	6
Time and Date	8
Alert Mode	9
Pleasant Alerts.....	10
Reminder Alerts	11
Backlight.....	12


MESSAGE FEATURES

Receiving/Reading Messages	12
Duplicate Messages	13
Locking/Unlocking Messages.....	13
Deleting Messages.....	14




INFORMATION SERVICE

 Your pager can even keep you up-to-date on the latest news. Information such as world news or financial reports can be received by the Aurora/Duo. (The extent of information received depends on your service provider. Please contact them for more details.)

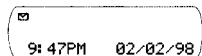

When new information is received, the unread Information symbol will flash.

 Press to enter Information Service mode.

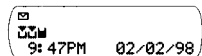


Press to read the highlighted information message

Press to move to the next message.




OUT-OF-RANGE

 When your pager is out of the range of the paging system transmitter, the OUT-OF-RANGE indicator is shown on the top of the screen.

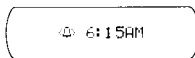

 
Press to highlight the minute field, then press to choose the minute.

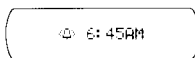


Press to highlight the **AM/PM** field, then press to choose either **AM/PM** field.
Press to set and exit.



 
AM ARM OFF

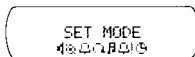


Press to enter **CONTROL MODE**.

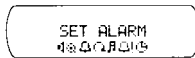 

Press to select **SET ALARM** function.

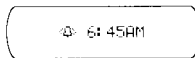 

Press to enter **SET ALARM** mode.

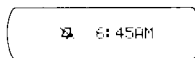 

Press to cancel the alarm.

Press three times to set and exit.

CONTENTS

SETTINGS

Message Reading Mode.....	16
Alarm On/Off	17

SPECIAL FEATURES

Information Services	19
Out-of-range Indicator.....	19
Low Battery Indicator	20

CARE AND MAINTENANCE

Battery Information	20
Care of your Pager	21
Repair and Maintenance.....	21
Patent Information	22

TYPES OF SYMBOLS

.....	24
-------	----



PAGER FEATURES

 
The Motorola Aurora/Duo offers a wide range of useful features.

- 2-Line, 18 character screen
- 18 message slots
- Real-time clock (in both 12 and 24 hours formats) with Date
- Horizontal and line-by-line scrolling
- All and selective message deletion
- Message locking for up to nine messages
- Sleep mode
- Silent (vibrate) alert
- Variable message scrolling speed
- Backlight
- Daily alarm
- Backlight
- Seven musical/pleasing alerts




ALARM ON


The alarm can be set to turn on at any time you specify.

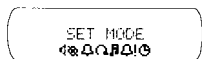


Press to enter CONTROL MODE.

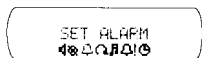 


Press to select SET ALARM function.

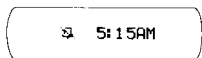 

Press to enter SET ALARM mode.

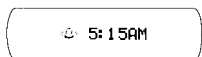 

Press to enable the alarm.

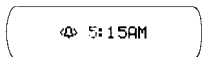 


Press to highlight the hour field, then press to choose the hour.




MESSAGE READING MODE

 
You can read your messages in two ways: either **LINE-BY-LINE** or the message can **SCROLL** automatically. There are three scroll speeds: **SLOW**, **MEDIUM** and **FAST**.

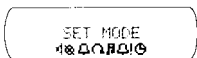

Press  to enter **CONTROL MODE**.

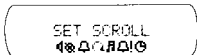 

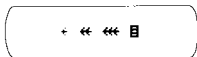 

Press  to select **SET SCROLL** function.



Press  to enter **SET SCROLL** mode.



Press and release  to select your preferred scroll speed.


Press  to set and exit.

16



FUNCTION BUTTONS



 
(Symbols and characters that are blinking on the pager display screen are shown in grey (e.g.  in this User's Guide.)




FUNCTION DETAILS

TURNING THE AURORA/DUO ON

Press

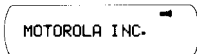

 The pager will beep or vibrate. This Startup Screen will appear for a few seconds.
(Press to skip the Startup alert.)

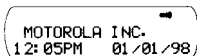

The Message Status Screen shows the time and date and will only appear for a few seconds.



The Standby Screen shows the Standby Symbol

While in the Message Screen, press twice to enter Control Mode.
In the Standby Screen, press once to enter Control Mode.

6

 


Press to delete the message.
Press to confirm and exit.


● All at once



Press to enter CONTROL mode.

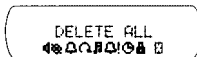

Press to select DELETES ALL function.

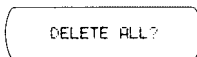 


Press to delete the entire read and unlocked Messages.
Press to confirm.



● Automatic Message Deletion

If all the message slots are full and a new message has been received, the oldest, unlocked, read message is automatically deleted.

 
When the message memory is full, the MEMORY FULL icon is displayed.

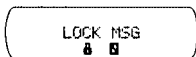

● Locking Messages



 While reading the message, press  to enter MESSAGE CONTROL mode.
Press  to lock the message.

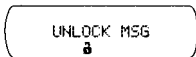● Unlocking Messages



 
While reading the locked message, press  to enter MESSAGE CONTROL mode.
Press  to unlock the message.




DELETING MESSAGES

Messages can be deleted one-at-a-time or all at once.

● One-at-a-time

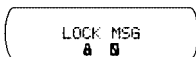

 
While reading an unlocked message, press  to enter MESSAGE CONTROL mode.

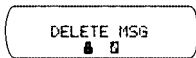


Press  to select DELETE MESSAGE.

14

  TURNING THE AURORA/DUO OFF

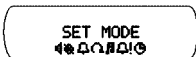

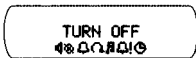

Press  to enter CONTROL MODE.



Press  to select TURN OFF function.
Press  to confirm TURN OFF mode.



Press  to set and exit.

 
 All pager settings and messages in memory are retained even when the pager is turned off. The clock and alarm will continue to function. However, you will not receive any new pages.




TIME & DATE




1. Press to enter **CONTROL MODE**.

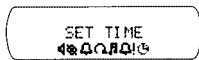

 
2. Press to select **SET TIME** function

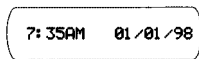

 3. Press to enter **SET TIME** mode.

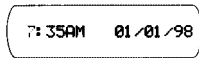

 4. Press to choose the hour.

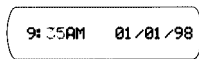


5. Press to highlight the minute field.


Press to choose the minute.

To set **AM/PM** and **24 Hr** fields, repeat step 5.

 8

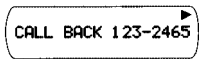


Press to view the rest of the message.

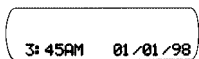 

The last screen will display the time and date the message was received. After an interval, your pager returns to the Standby screen.



 DUPLICATE MESSAGE

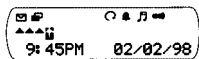

The Duplicate symbol is shown at the top of the screen if a duplicate message is received.

Press to read the message



LOCKING. UNLOCKING MESSAGES

Save messages by using the **LOCK** function. This also prevents important messages from being deleted when the memory is full. Messages can only be locked while reading them. Up to nine messages can be locked.



 
BACKLIGHT

To activate the screen backlight, press and hold for at least two seconds. The backlight automatically turns off after 12 seconds.




RECEIVING MESSAGES

When a message is received, the pager will alert you according to the alert mode that has been chosen (AUDIBLE, SILENT or SLEEP). If SLEEP has been chosen, the pager will only alert you when priority messages are received.

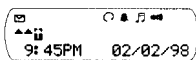


On receiving a message, your pager alerts you and the Unread Message symbol flashes. Press to read the highlighted message .

 To move to the next message, press .

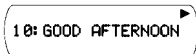


If the message is longer than the screen, the Arrow icon will appear the top-right corner.

 
12

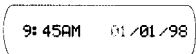

 6. Press to highlight the date field. Press to choose the date.

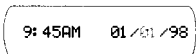

 7. Press to highlight the month field. Press to choose the month.

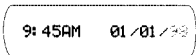


8. Press to highlight the year field. Press to choose the year.

9. Press to set and exit.




ALERT MODE

 
There are three Alert modes - AUDIBLE, SILENT and SLEEP.

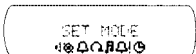

 
Press to enter CONTROL MODE.
Press to enter ALERT MODE.

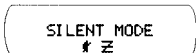


Press and release to select your favourite alert Mode.

Press  to set and exit.


 In **SLEEP** mode, the pager will not alert you when a new page has been received.

PLEASING ALERTS

 Within the **AUDIBLE** alert mode, besides the standard alert, you may also choose from seven other **PLEASING ALERTS**.

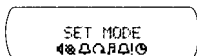



Press  to enter **CONTROL MODE**.

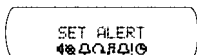 


Press  to select **SET ALERT** Function.

 Press  to enter **SET ALERT** mode.

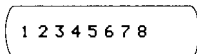


Press  to scroll through the eight choices.

Press  to set and exit.


10

REMINDER ALERT ON

 Use this feature to remind you of an unread message. If a message remains unread, a reminder chirp will sound at 2-minute intervals (for up to half an hour).

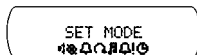


Press  to enter **CONTROL MODE**.

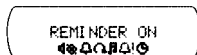 


Press  to select **REMINDER ON** Function.

Press  to set and exit

 
REMINDER ALERT OFF

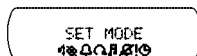

Press  to enter **CONTROL MODE**.

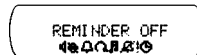 

Press  to select **REMINDER OFF** Function.

Press  to set and exit